



# CAUTION

## Precaution for Linear Servo Actuator Installation

The methods to install the linear servo actuator is basically limited as shown in the following table.  
Please be careful when orienting the actuator. (Special order models are excluded)

○: Available

×: Not available

Model Code	Standard Horizontal Orientation	Vertical Orientation	Horizontally Oriented Wall Mount	Ceiling Mount
S6	○	×	○	×
S8	○	×	○	×
S10	○	×	○	×
H8	○	×	○	×
L15	○	×	×	×
N10	○	×	×	×
N15	○	×	×	×
N19	○	×	×	×
W21	○	×	×	×

The models indicated that are unable to be horizontally wall mounted are due the following reasons:  
 - the sagging and biting of the dust strip by the slider(s) for stroke lengths longer than 400mm  
 - the linear bearings have not been designed to account for loading in this orientation

**IAI**  
Quality and Innovation

ME3686-1A October 23, 2009

Revision History	Issue Date	Note	Issued by
TIPS-090130	November 12, 2009	Initial Issue	Gene Changnon
TIPS-090131	March 23, 2010	Comments on wall mounting	Gene Changnon